 
 



Release Valve

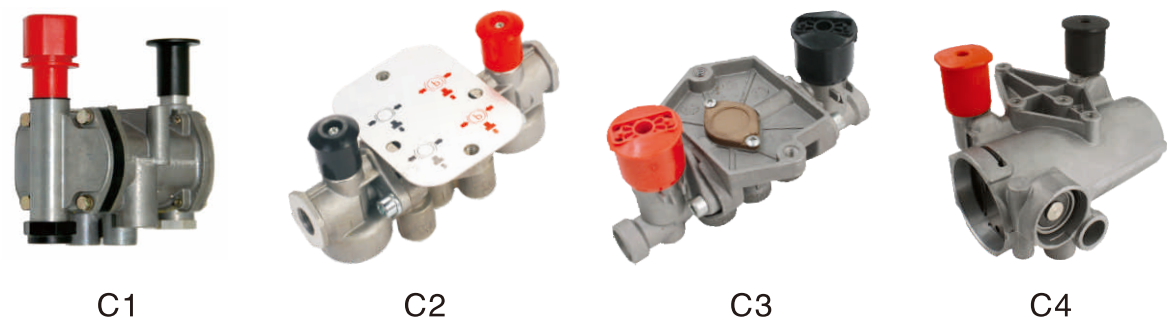


Single Check Valve/Double Check Valve

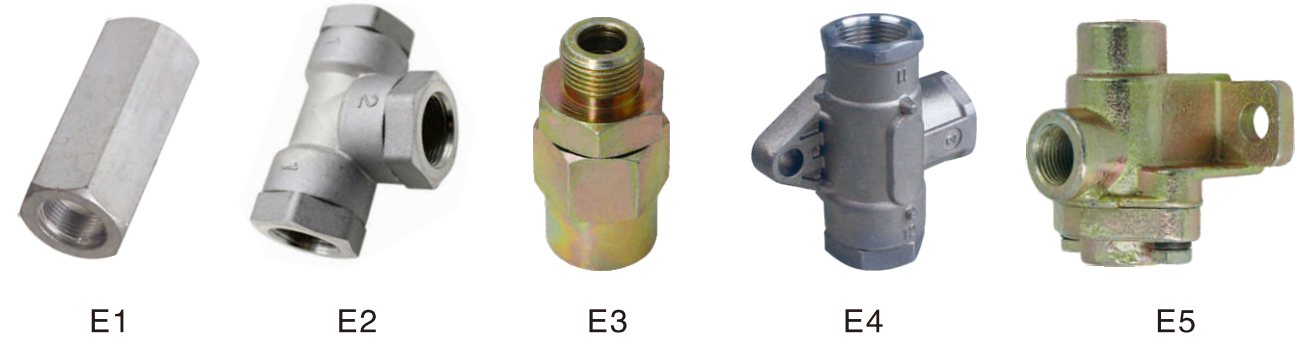

 
Release Valve

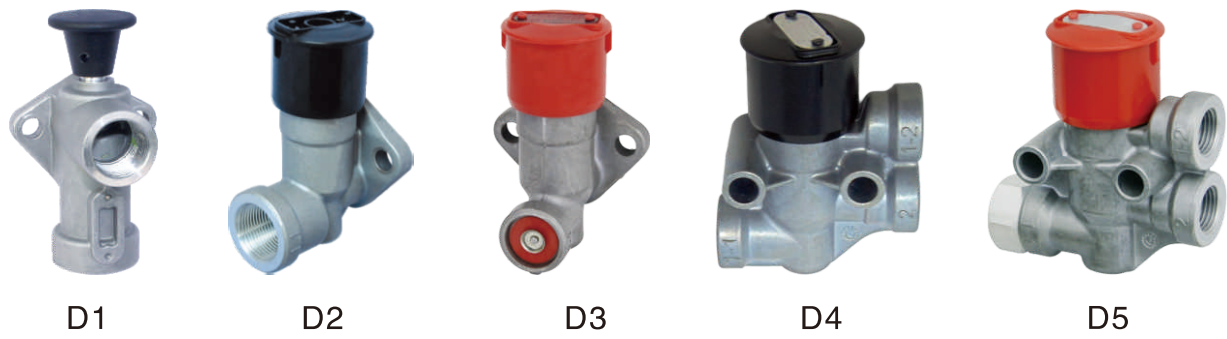


Pnevmatic Switch Valve

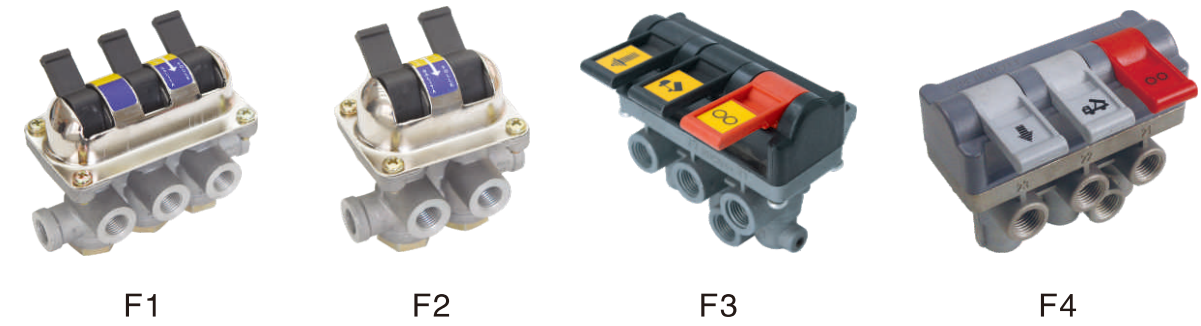 

Cut Off Valve/Rotary Slide Valve

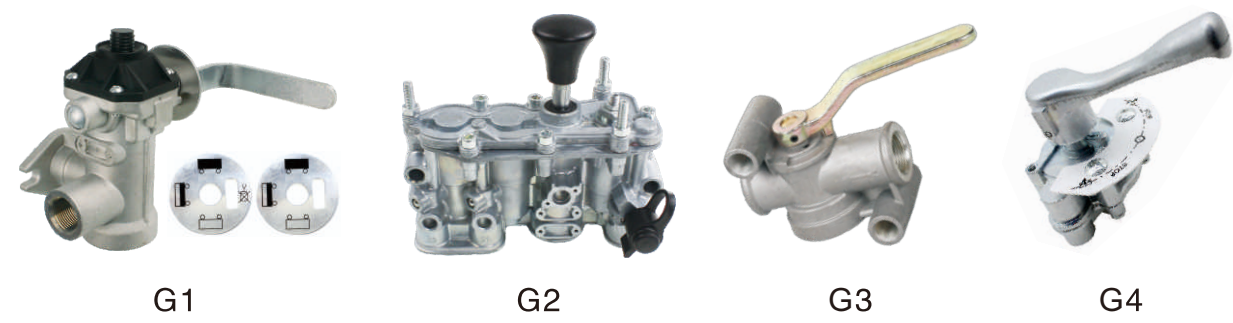 


Tractor Brake Valve

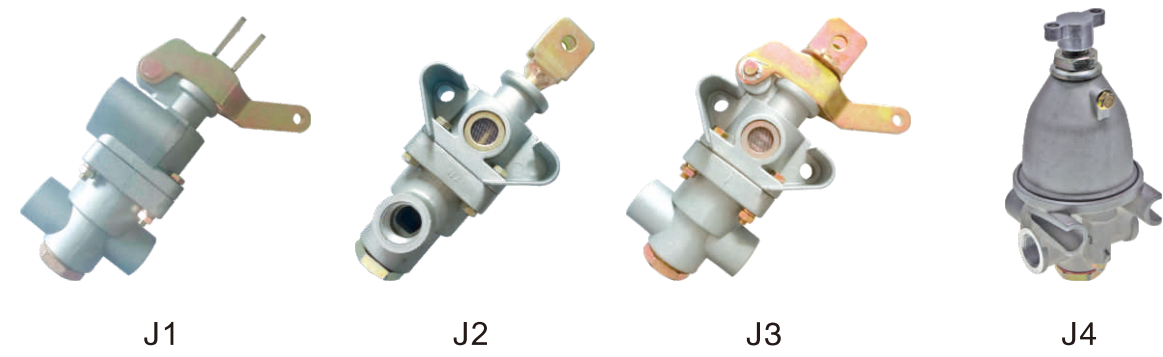 

Drain Valve



 Solenoid Valve

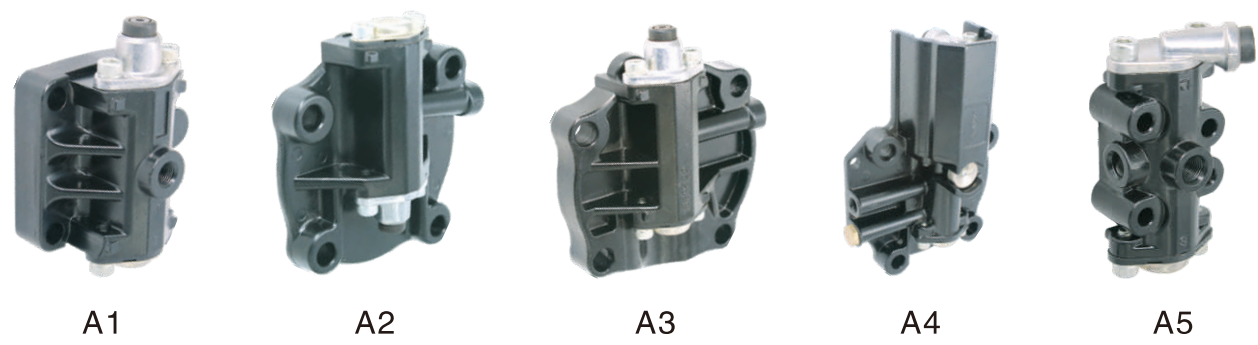

Solenoid Valve



B1



B2



B3



B4



B5

Solenoid Valve



D1



D2



D3



D4



D5

Solenoid Valve



C1



C2



C3



C4



C5

 
Solenoid Valve



E1



E2

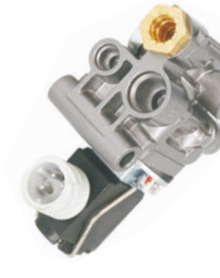

E3



E4



E5

Solenoid Valve



F1



F2

 


F3



F4

ABS Modulator Relay Valve

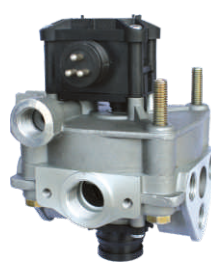

A1



A2



A3

 


A4

Solenoid Valve



G1

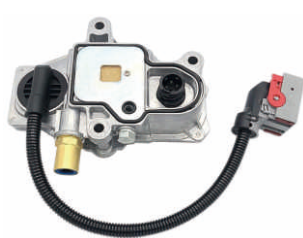

G2



G3



G4

ABS Modulator Relay Valve



B1



B2



B3

 


B4




B5


ABS Modulator Relay Valve

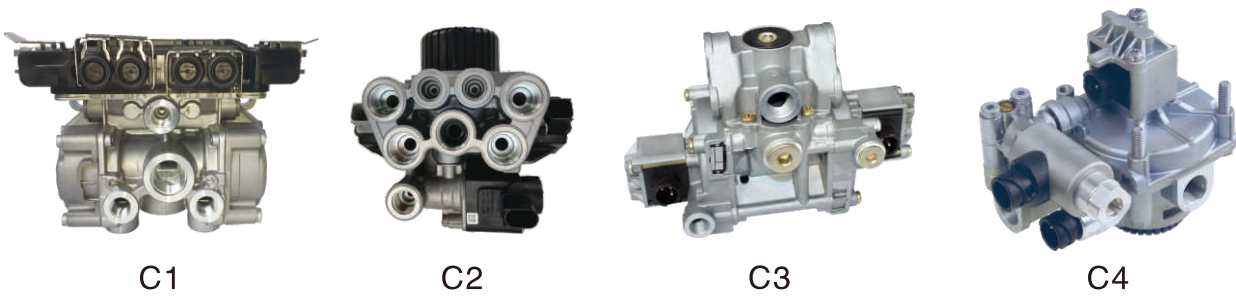


ECAS VALVE

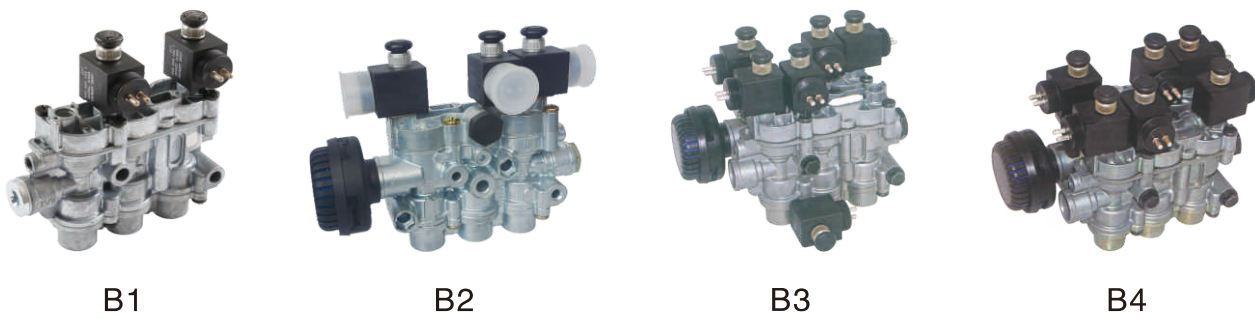 


ECAS VALVE

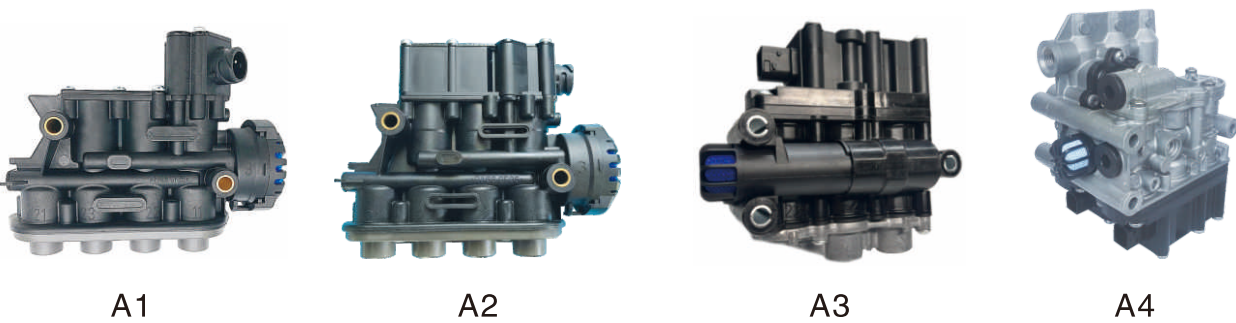 


ECAS VALVE

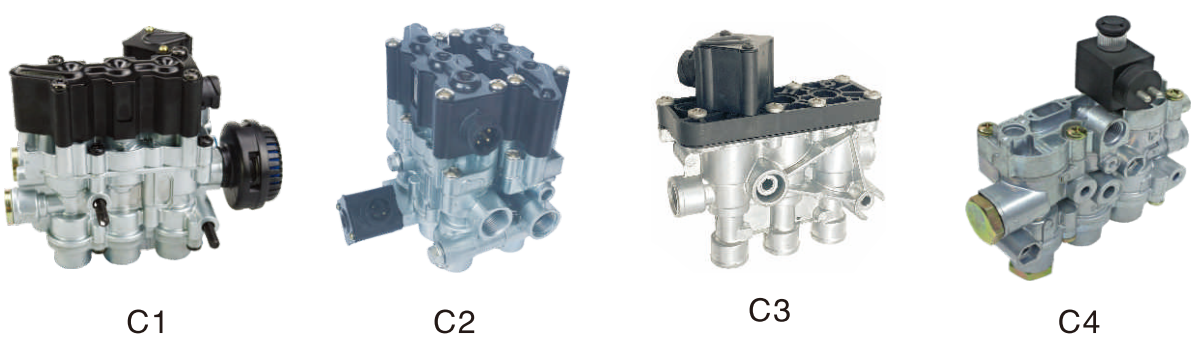 


ECAS VALVE

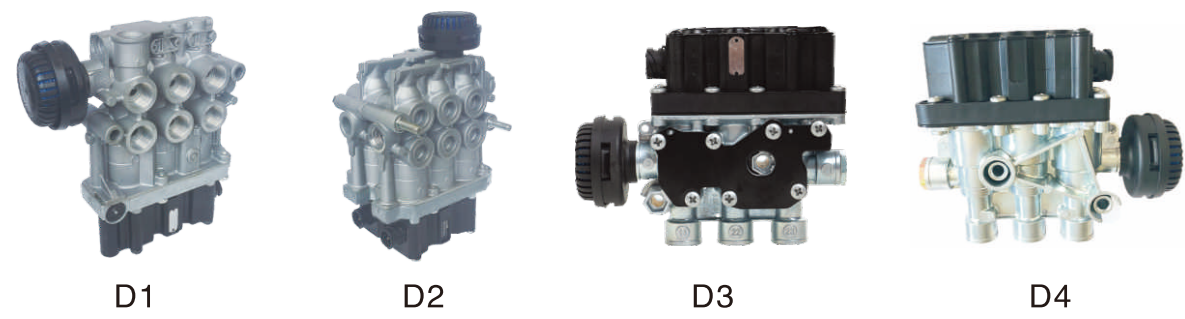 


Clutch Servo

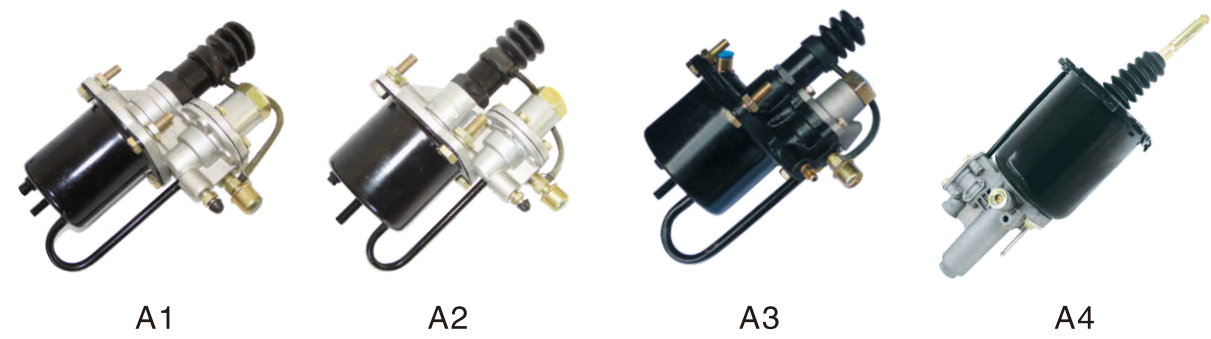 


ECAS VALVE

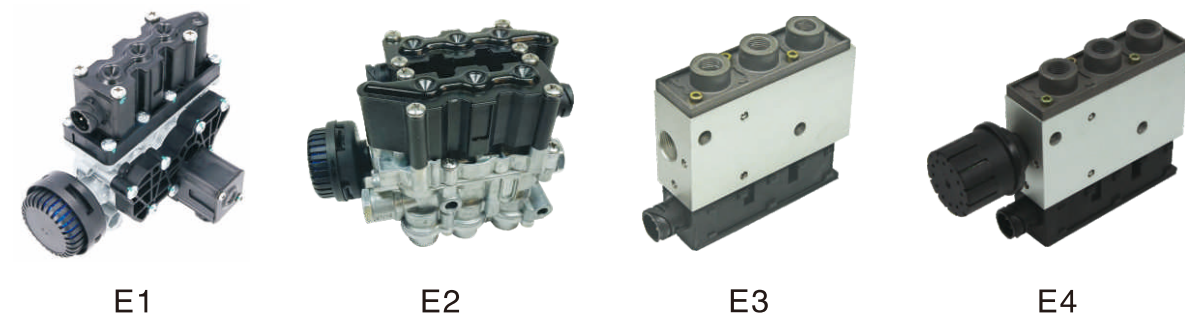 


Clutch Servo

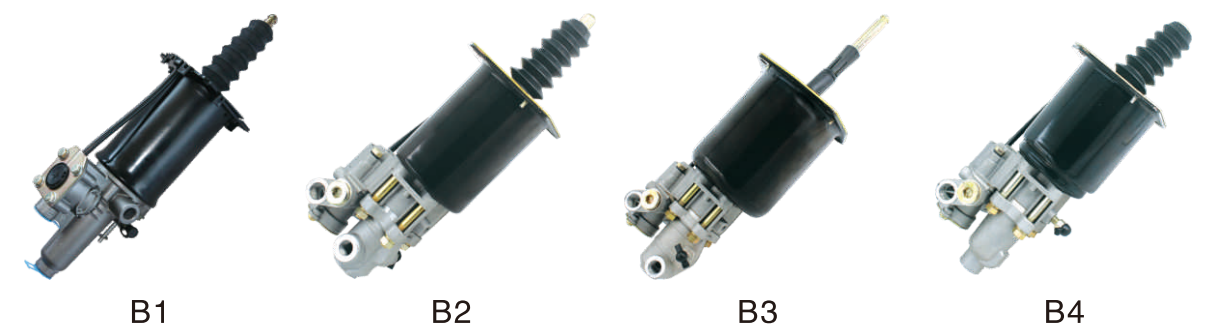 


Clutch Servo

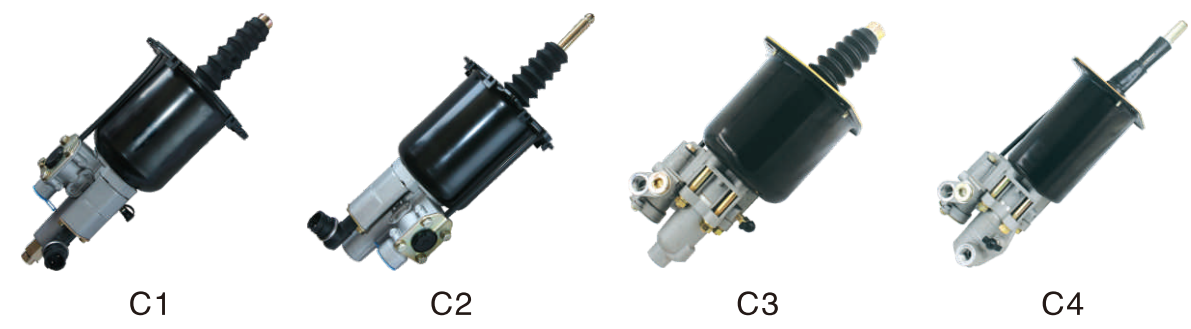 


Clutch Servo

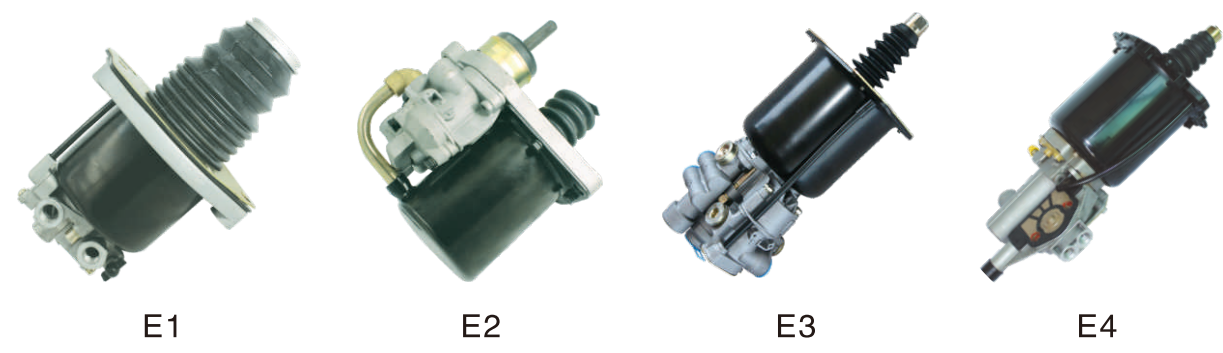 


Clutch Servo

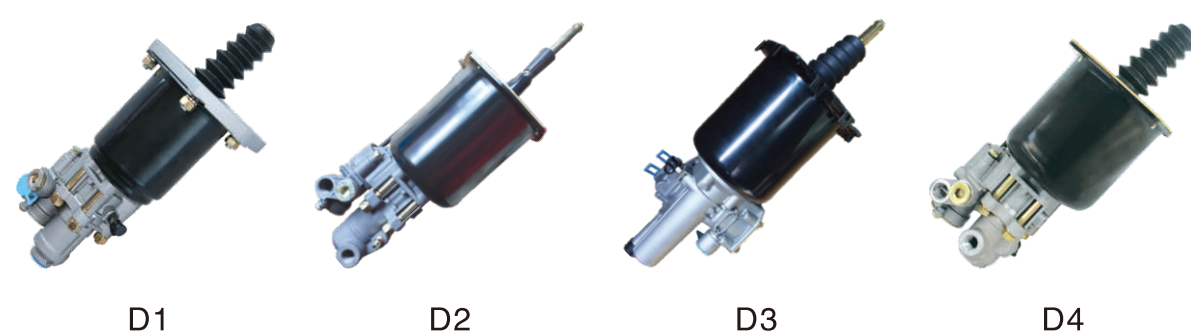 


Clutch Servo

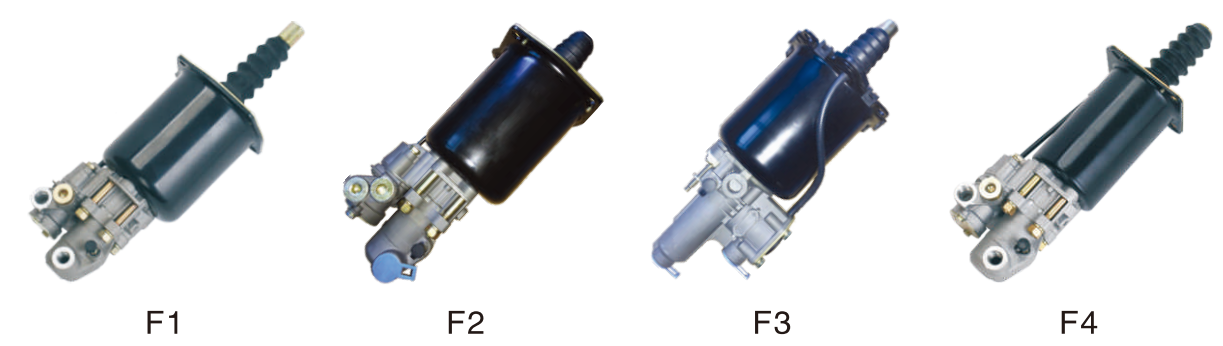 


Clutch Servo

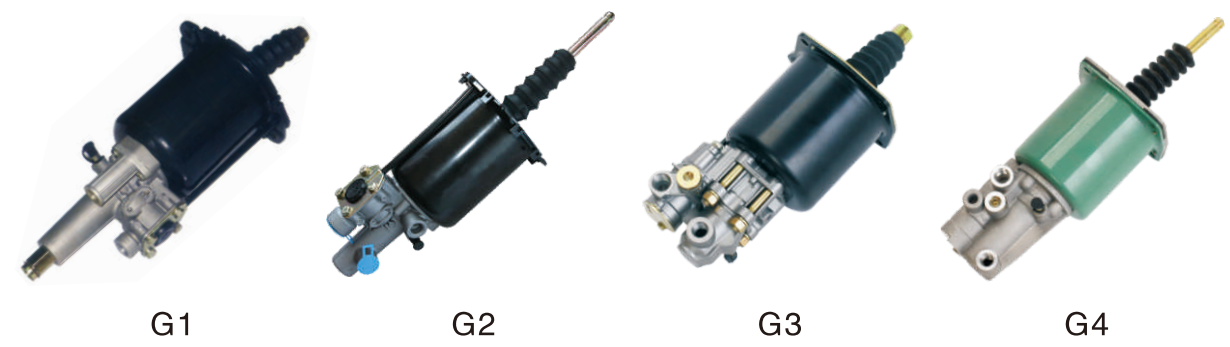 


Clutch Servo

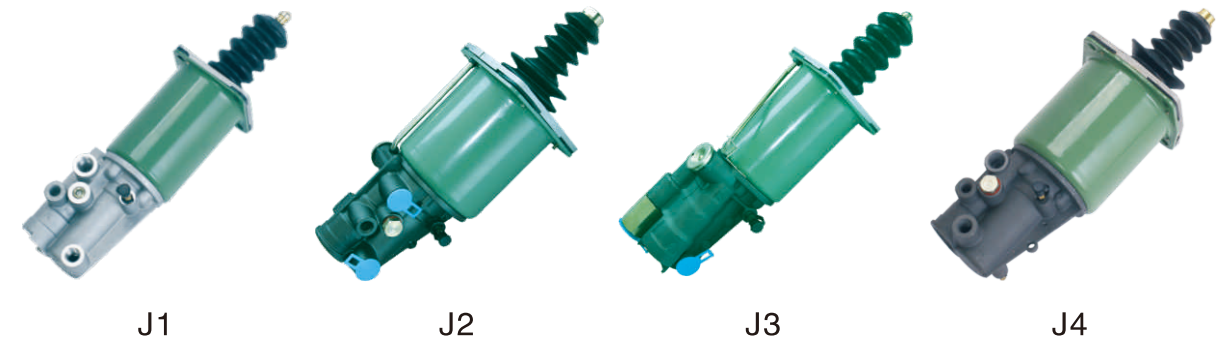 


Clutch Servo

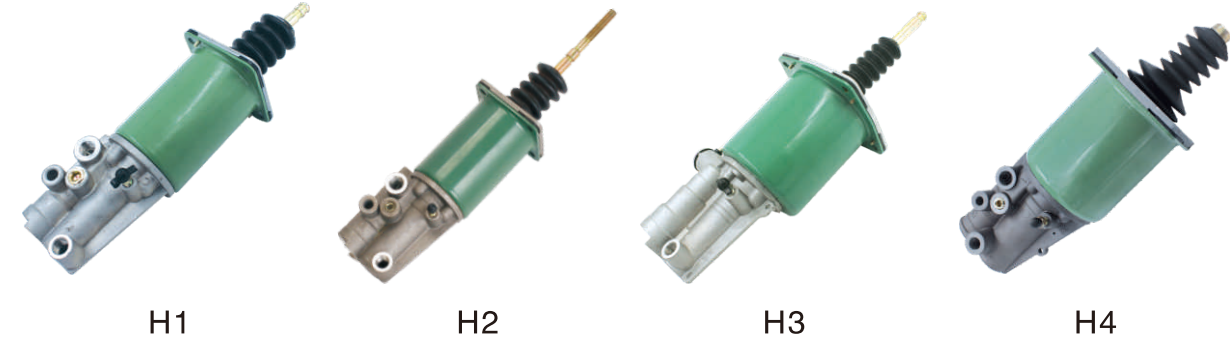 


Clutch Servo

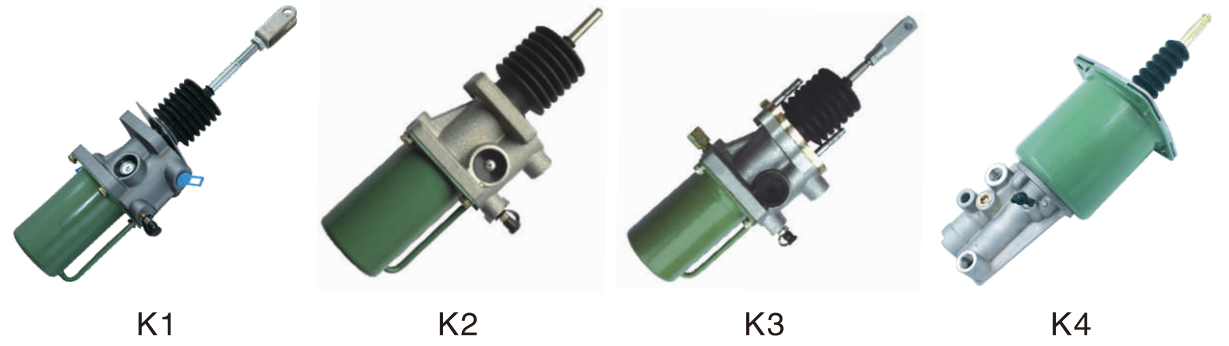 

Clutch Servo

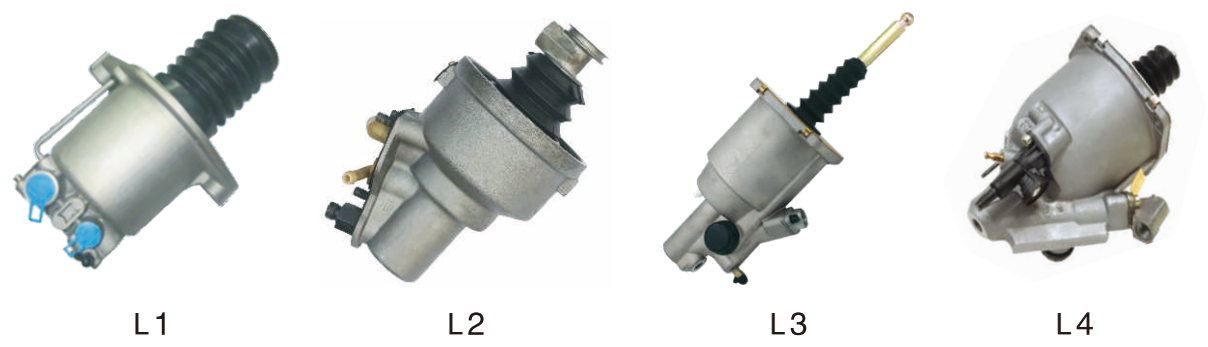 


Clutch Servo

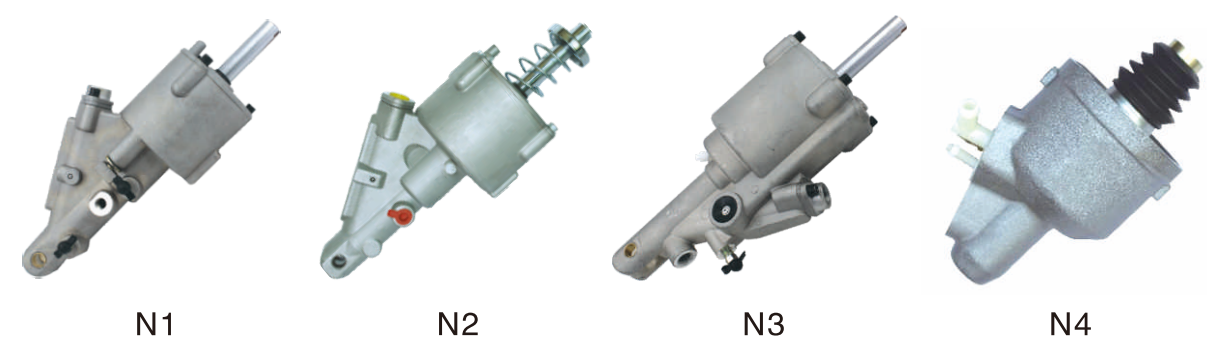 

Clutch Servo



 Clutch Servo

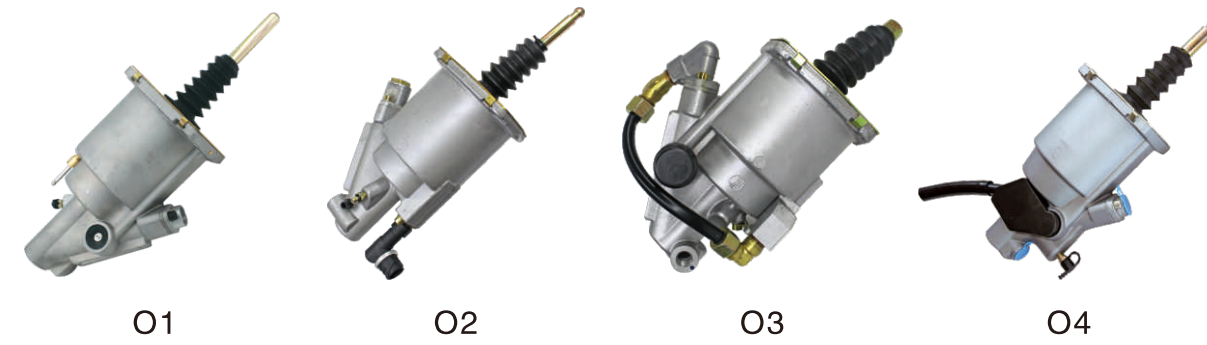

Clutch Servo



P1



P2



P3



P4

Clutch Servo



R1



R2



R3



R4

Clutch Servo



Q1



Q2



Q3



Q4

Clutch Servo



R5



R6



R7

 


R8


Clutch Servo




Clutch Servo

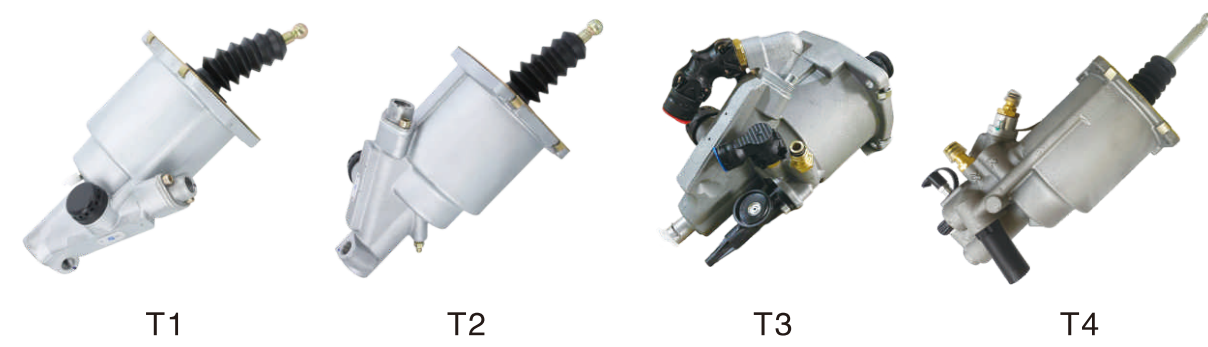

Clutch Servo

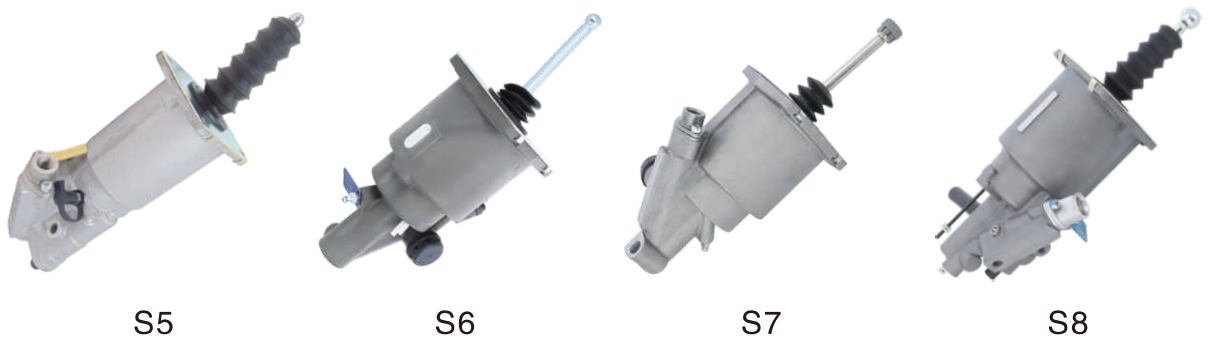 

Clutch Servo

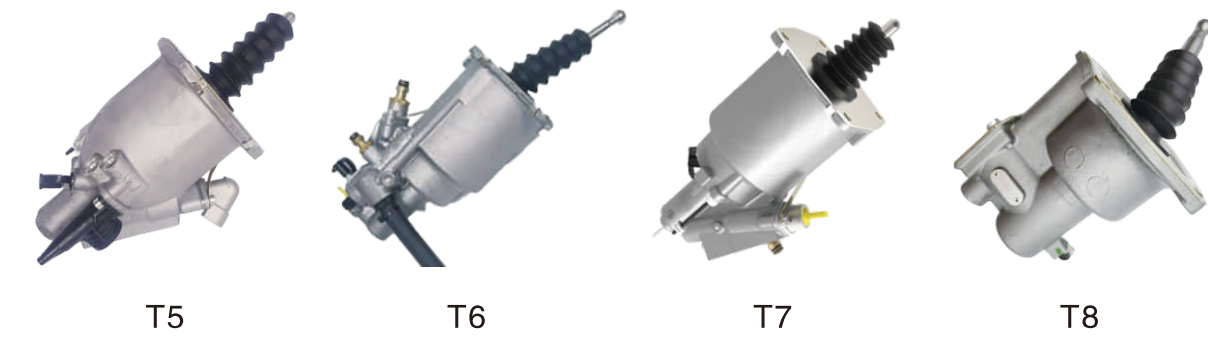 

Clutch Servo



U1



U2



U3



U4

Clutch Master Cylinder



A1



A2



A3



A4

Clutch Servo



U5



U6



U7



U8

Clutch Master Cylinder



B1



B2

 


B3




B4


Clutch Master Cylinder

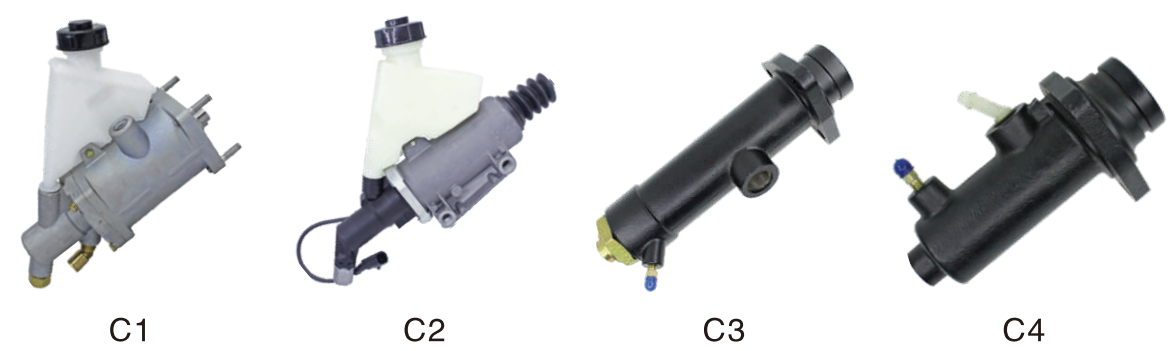


Control Cylinder

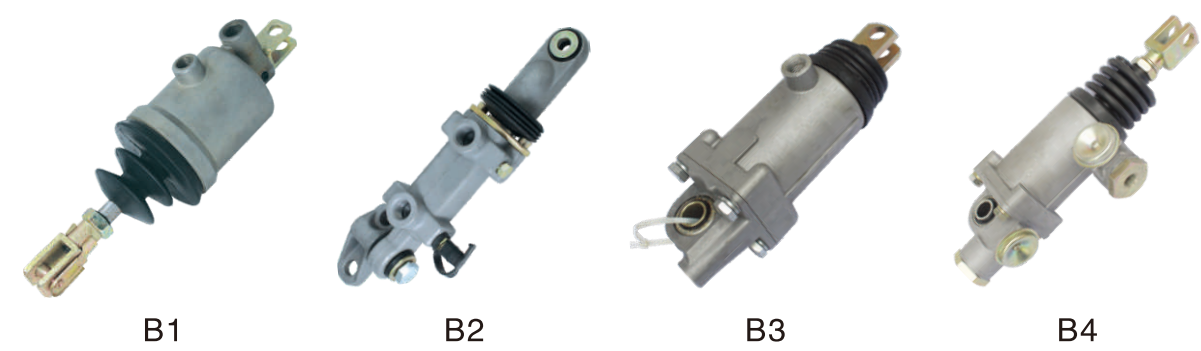 

Control Cylinder

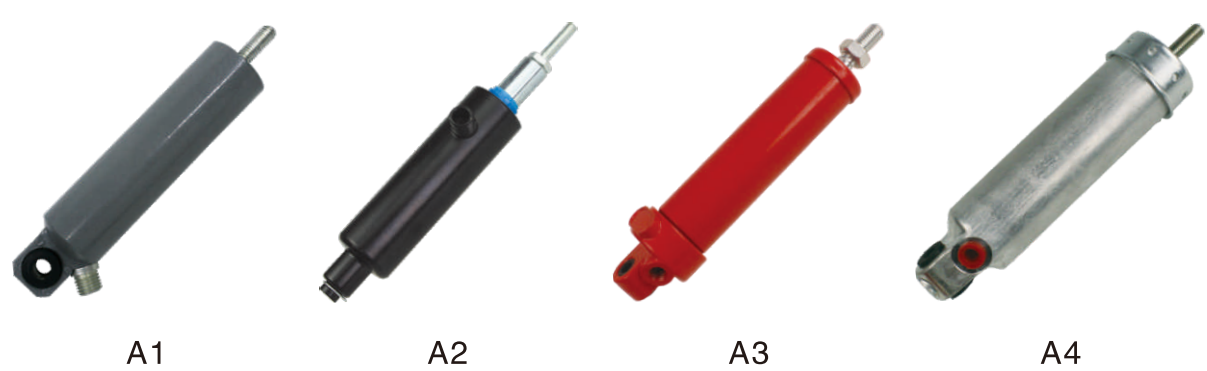 

Control Cylinder

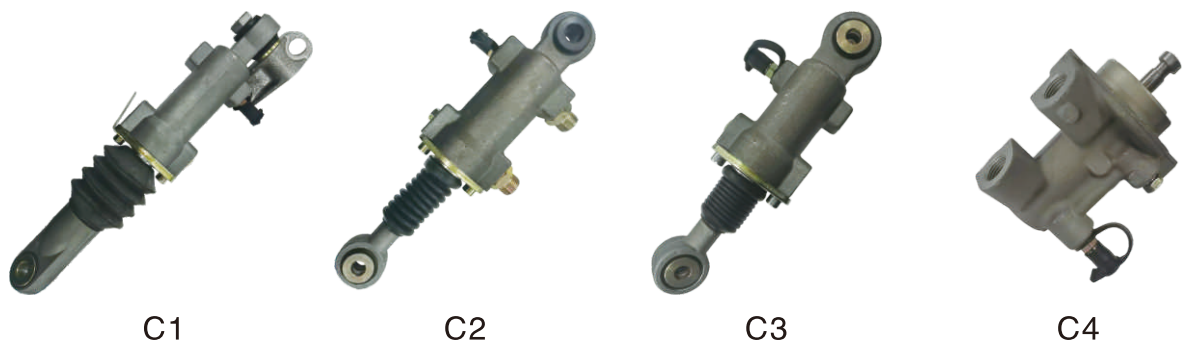 

Shift Knob



A1



A2



A3



A4



A5

Shift Knob



B1



B2



B3



B4



B5

 
Repair Kits




KA3518AH-KT




KA3518MA-KT

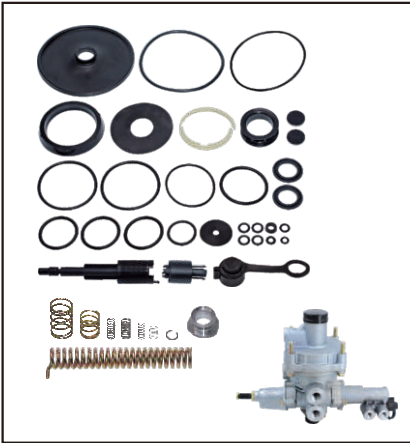

KA3523AK-KT

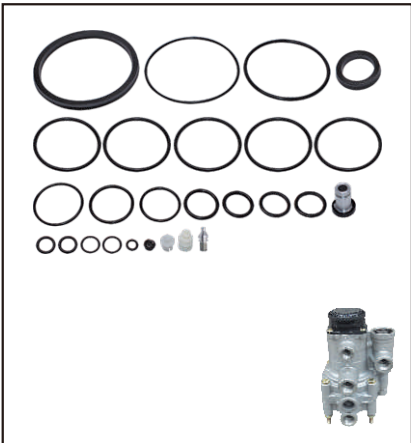 

KA3522FA-KT

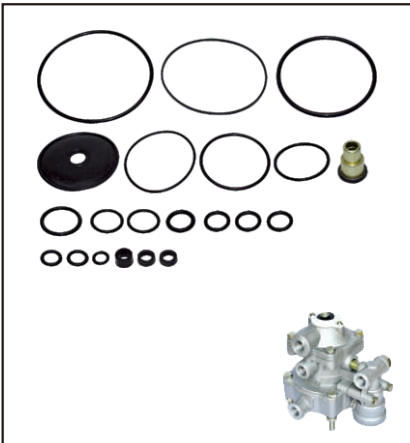 

KA3522BA-KT



KA3511AM-KT



KA3514DS-KT



KA3514EA-KT



KA3514XA-KT